

brother



LABEL PRINTER

D02KY5001



**TD-2310D/TD-2320D/TD-2350D/TD-2320DF/
TD-2350DF/TD-2320DSA/TD-2350DSA/
TD-2350DFSA**



1

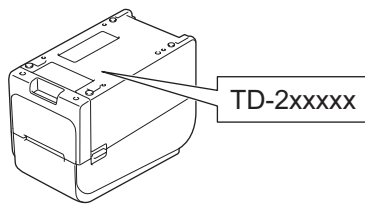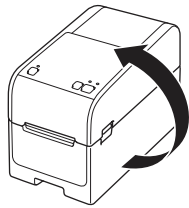

TD-2xxxxx

**TD-2320D
TD-2350D
TD-2320DF
TD-2350DF
TD-2320DSA
TD-2350DSA
TD-2350DFSA**

+
CR2032

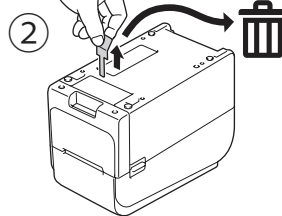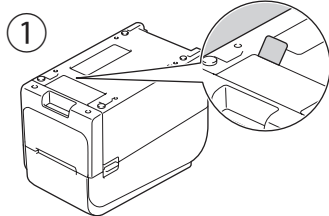

**Quick Setup Guide / Installationsanleitung / Guide d'installation rapide / Installatiehandleiding /
Guida di installazione rapida / Guía de configuración rápida / Guia de Instalação Rápida /
Hurtig installationsvejledning / Pika-asennusopas / Hurtigstartguide / Snabbguide /
Stručný návod k obsluze / Gyors telepítési útmutató / Podręcznik szybkiej obsługi /
Ръководство за бързо инсталиране / Ghid de instalare și configurare rapidă /
Stručný návod na obsluhu / Kratki korisnički priručnik / Priročnik za hitro pripravo /
快速安裝指南 / 快速安裝指南 / かんたん設置ガイド**

TD-2310D	✓	✓	✓	✗
TD-2320D	✓	✓	✓	✗
TD-2350D	✓	✓	✓	✗
TD-2320DF	✓	✓	✓	✓
TD-2350DF	✓	✓	✓	✓
TD-2320DSA	✓	✓	✓	✗
TD-2350DSA	✓	✓	✓	✗
TD-2350DFSA	✓	✓	✓	✓














* See the User's Guide for instructions on how to replace Media Roll Holders.
* Anweisungen zum Auswechseln der Rollenhalter finden Sie im Benutzerhandbuch.
* Consultez le Guide utilisateur pour les instructions de remplacement des supports de rouleau.
* Zie de gebruikershandleiding voor instructies over het vervangen van mediarolhouders.
* Per le istruzioni su come sostituire i supporti dei rotoli di carta, consultare la Guida dell'utente.
* Consulta la Guía de usuario para obtener información sobre cómo sustituir los soportes de rollo.
* Consulte o Manual de utilizador para obter informação sobre como substituir os suportes do rolo.
* Se brugsanvisningen, for vejledning til hvordan du udskifter medierulleholdere.
* Katso käyttöohjeesta miten ulkoisen rullapidike asennetaan.
* Se bruksanvisningen for instruksjoner om hur du byter ut medierullholdere.
* Se bruksanvisningen för instruktioner om hur du byter ut hållarna för medierullen.
* Pokyny jak vyměnit držáky role médií naleznete v Uživatelské příručce.
* A szalagtekercs-tartók cseréjére vonatkozó utasításokat a Felhasználói kézikönyvben találja.
* Zapoznaj się z Podręcznikiem użytkownika, aby uzyskać instrukcje dotyczące wymiany uchwytów na rolkę z nośnikiem.
* Вижте Ръководството на потребителя за инструкции как да смените държачите за ролки.
* Consultati Ghidul utilizatorului pentru instrucțiuni despre cum să înlocuiți suporturile pentru role media.
* Pozrite Priručku pouzivatela ohľadom výmeny držáka roliek médií.
* Za informacije o tome kako zameniti nosač role, pogledajte korisnički priručnik.
* Za informacije o tem, kako zamenjati nosilec role, glejte priročnik za uporabnike.
* 关于如何更换标签卷支架挡板的说明，请参阅用户指南。
* 關於如何更換標籤捲支架擋板的說明，請參閱使用者指南。
* ロールホルダーの交換方法については、ユーザズガイドを参照してください。

TD-2310D/TD-2320D/TD-2350D/TD-2320DSA/TD-2350DSA → 2a

TD-2320DF/TD-2350DF/TD-2350DFSA → 2b

2a


TD-2310D/TD-2320D/TD-2350D/TD-2320DSA/TD-2350DSA

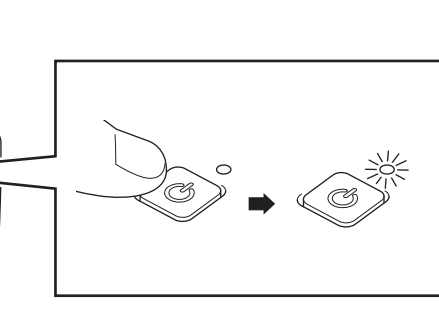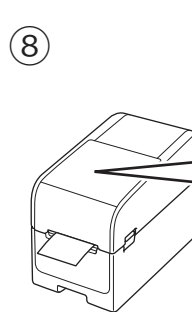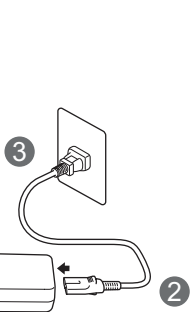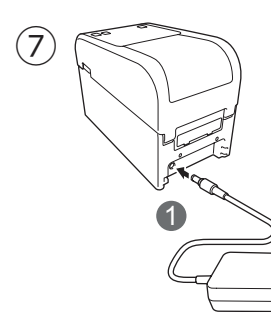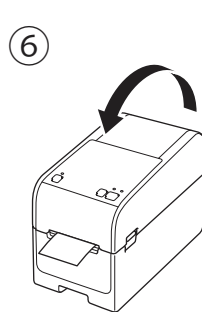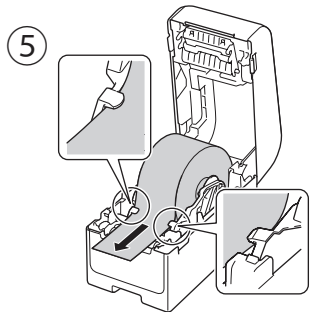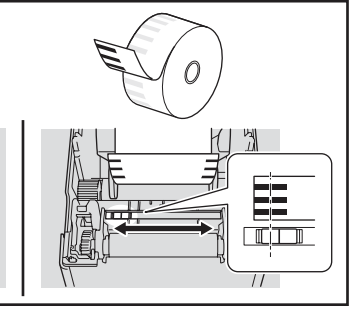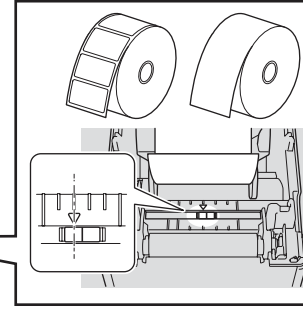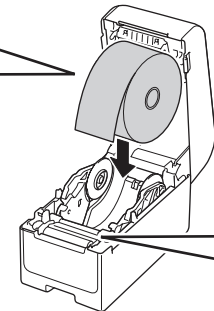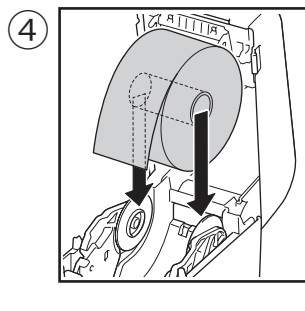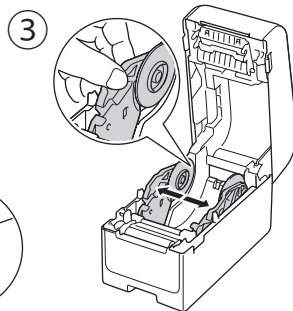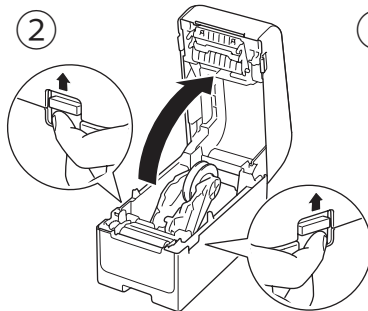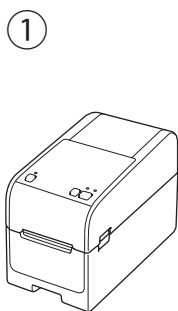

→ 3

2b

TD-2320DF/TD-2350DF/TD-2350DFS

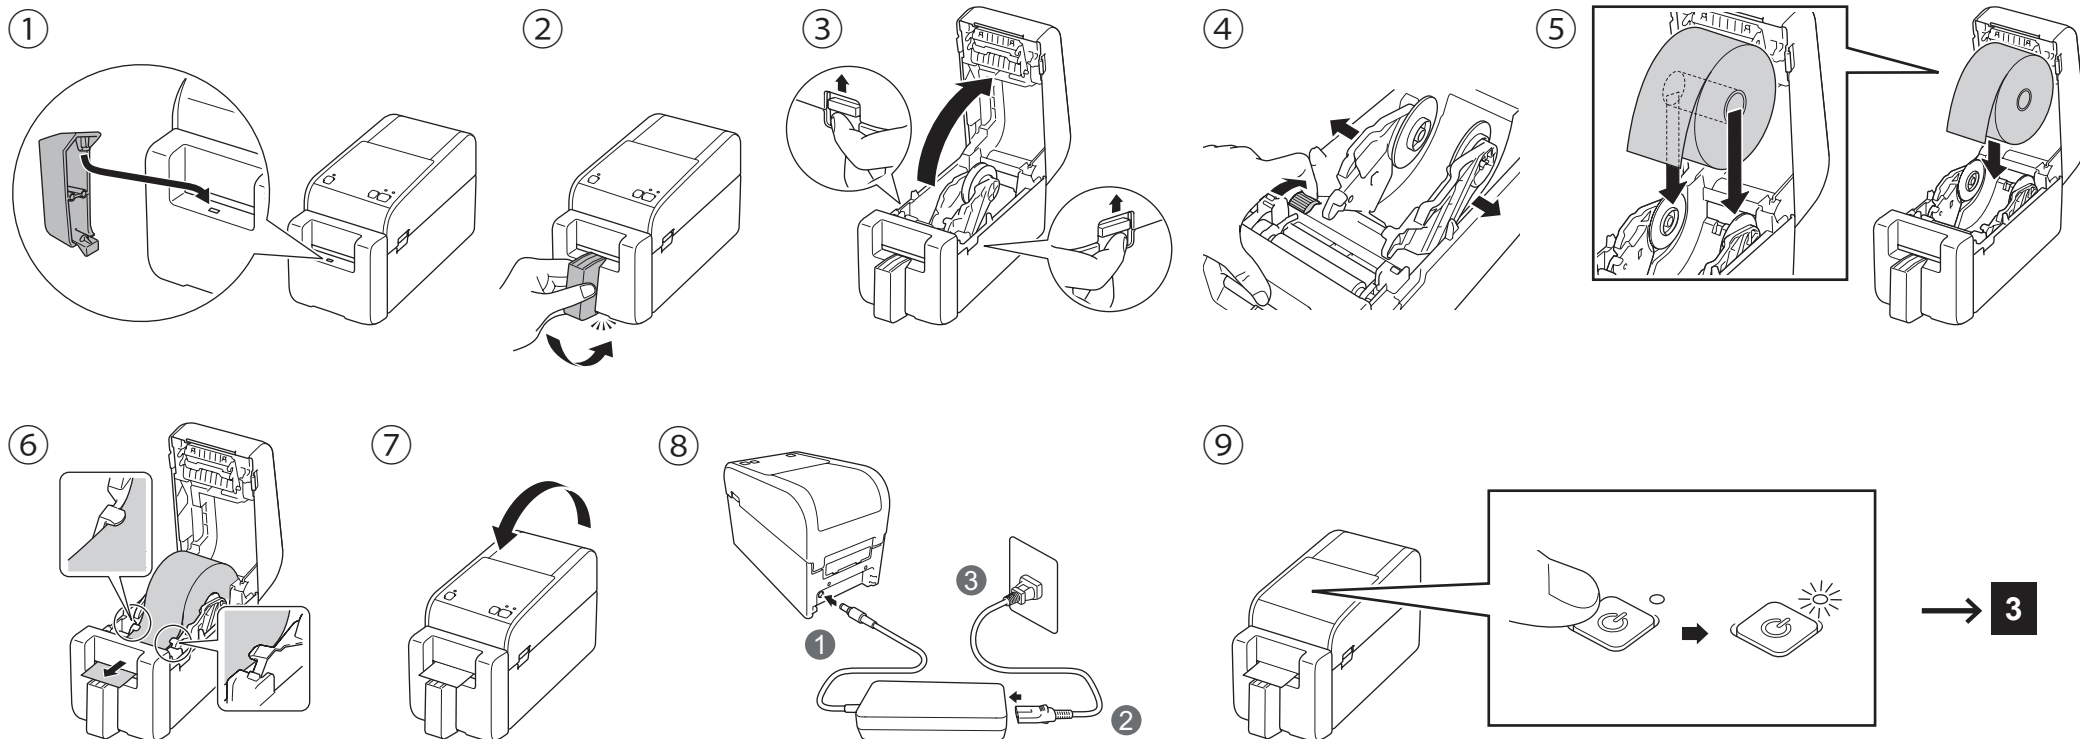

3



support.brother.com/manuals



support.brother.com/g/d/f5fg

